



deco:foil™

iCraft® Deco Foil™ Clear Designer Toner Sheets- #5512, 5513, 5514, 5515, 5516, 5517, 5518, 5519, 5520

Directions: For best results, always pre-test.

*Laminator settings may vary based on brands/models, temperature and speed settings.

1. Trim Deco Foil™ Clear Designer Toner Sheets to desired size or shape using scissors, dies or electronic cutting system.
2. Cut a piece of foil slightly larger than design. Place foil, color side up, on top of the dull, textured side of the Deco Foil™ Clear Designer Toner Sheets (to determine dull, textured side, run fingertips lightly over design). Place onto a piece of cardstock for support and place inside the folded parchment paper (enclosed).
3. Turn on laminator, select 5 mil setting, and allow 10 minutes to warm up. When ready, insert folded parchment with project into laminator using the crease as the lead edge.
4. Remove project from parchment paper. Peel foil transfer sheet away to reveal foiled design.